#### OTHER INSTRUMENTS



# DIGITAL LOOP/PSC TESTER

**Model 6130** 

#### **FEATURES**

Convenient to measure the loop impedance directly without bypassing the wires

15mA loop measurement which will not trip ELCBs

Wiring check function

**Backlight function** 

Battery is not used

Over temperature protection

Over voltage protection

**Built-in voltmeter** 

Provided with carrying case

Safety standard: EN 61010-1 CAT III 300V EN 61326-1





## **KOICO 6130 ELECTRICAL SPECIFICATIONS**

| Parameter                                       | KOICO 6130   |
|---|--|
| Loop Impedance Range                            | $20~\Omega~(0.00~\sim19.99\Omega)$<br>$200~\Omega~(0.00~\sim199.9\Omega)$<br>$2000~\Omega~(0.00~\sim1999\Omega)$                             |
| Nominal Test current at $0\Omega$ external loop | 23A/40ms<br>2.3A/40ms<br>15mA/400ms  |
| Loop Impedance Accuracy                         | 2%rdg + 4dgt   |
| Prospective short circuit current Range         | 20 KA (0.00 ~ 4.00 KA)<br>2000 A (0 ~ 1999 A)<br>200 A (0.00 ~ 199.9A)   |
| Nominal Test current at $0\Omega$ external loop | 23mA/40ms<br>23mA/40ms<br>2.3mA/400ms  |
| Accuracy  | Consider accuracy of Loop Impedance  |
| Voltage display Range                           | 150~260 V  |
| Accuracy  | (2%rdg + 4dgt)   |
| System voltage                                  | 230V (+13%, -15%)  |
| System frequency                                | 50Hz   |
| None Battery system voltage                     | 150V ~ 260V  |
| Opearting Temperature                           | 0 ~ 40 °C  |
| Wiring check                                    | P-E LEDs illuminate when the wiring polarity of circuit under test is correct  |
| P-N   | P-N  |
| N-E   | N-E LED is light when P and N are reversed or the Earth is not connected   |
| 15mA Loop measurement                           | Loop impedance $2000\Omega$ range measurement is carried out with low test current (15mA). The current will not cause tripping out for ELCBs |
| Over Temperature Protection                     | When over heating, the ' 🖟 ' symbol will show on LCD & instrument will stop measuring  |

## **INCLUDED ACCESSORIES**

Model AR-60 (Test Leads) Model AR-120 (Hard carrying case) Model AR-61 (Hand Strap) Instruction Manual

### Optional Accessories

AR-210 (Plug type test lead)









